


6" Poly-Air™ Activated Carbon Vent Filter

Installation Instructions:

1. Remove contents from box.
 - 1 Filter Housing
 - 1 Lid with 3 Screws
 - 1 Netted Bag of Activated Carbon Pellets
 - 4" Pipe Reducer (Optional)
2. Remove the netted bag of activated carbon pellets from the zip lock bag.
3. Slide the netted bag of activated carbon pellets into the 6" Poly-Air™ housing (**See Diagram**).
4. Take the 6" Poly-Air™ lid and place it on top of the 6" Poly-Air™ housing. Make sure to align screw holes on lid with screw holes on housing.
5. Tighten all three lid screws using a Phillips screwdriver
6. If using 6" Poly-Air™ on a 4" vent pipe take the pipe reducer and spread glue on the **OUTSIDE** perimeter as shown on the right. Slide reducer into the bottom of the 6" Poly-Air™ housing. Align filter housing to top of vent pipe and press down firmly to lock in place.

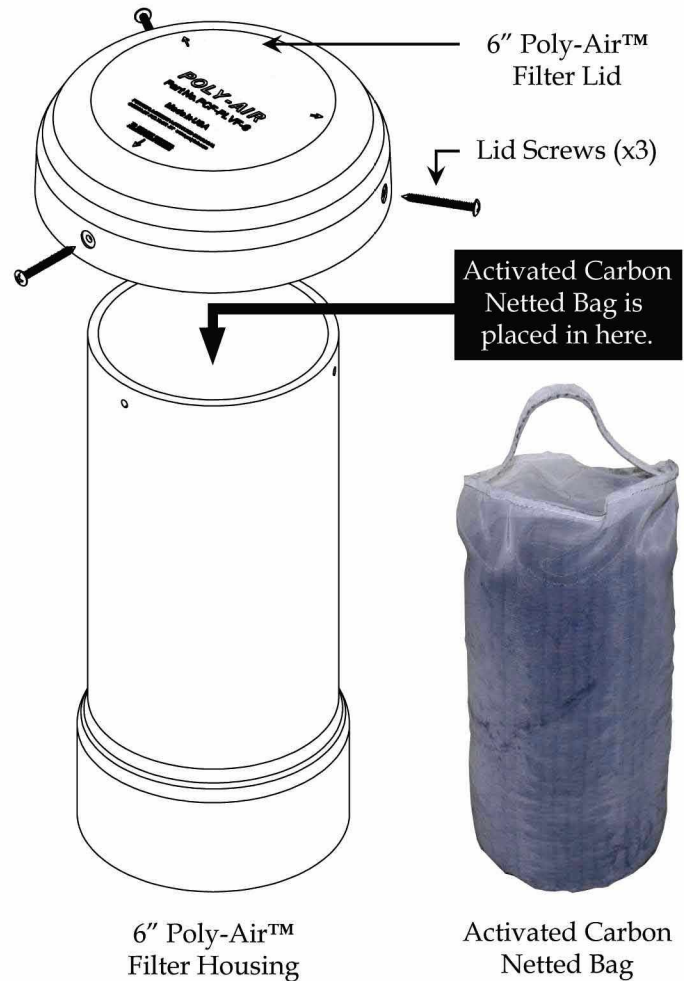

Maintenance Instructions:

1. Unscrew the 3 screws from the 6" Poly-Air™ lid.
2. Remove lid from the 6" Poly-Air™ housing.
3. Using the provided handle on the netted bag of activated carbon pellets lift bag out of the housing and discard.
4. Follow **Installation Steps 3-6** to complete 6" Poly-Air™ maintenance.

